

High-precision Handgrinder for grinding whole, roasted coffee beans, corns, grains or herbs.

Thank you for choosing our coffeegrinder **etz-U**, an innovative handgrinder facilitating manual grinding not just in regards of handling and adjusting.

Open the box and carefully pull out the grinder. Make sure to check the delivery content before getting your grinder ready for use. To get started, please follow our instructions and pictures. To clean your grinder, use a soft cloth and/or a brush. Do not clean the burrs with water and avoid to touch them with wet fingers.

For more information, please visit our Website (for Warranty policy, see „Good to know“).

THANK YOU – ENJOY THE GRIND!!



Grinder Parts

- 1 Grinder Body (Housing) w/ Crank Handle
- 2 Lid (magnetically attached)
- 3 Adjustment Ring w/ Coneholder & Cone burr
- 4 Magnetic Collection Cup

Specifications

Burr Size :	32mm (Diameter Cone Burr)
Burrs :	Hardened Steel (62 HRC)
Weight :	805g (Regular), 685g (Trim)
Diameter :	55mm (Regular), 47mm (Trim)
Collection Cup:	60mm Outer Diameter / 55mm Opening
Height :	225mm (Handle retracted)
Body (Housing):	Anodised Aluminum
Movable parts:	Fibreglas reinforced plastic (FRP)

etz-U[®] GET STARTED



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5

Fig. 5



Fig. 6

Fig. 7

CRANK

Pull out crank handle (Fig. 1) in vertical direction. Press it down horizontally (Fig. 3) until snapped into place.

ADJUSTMENT

The Adjustment (Fig. 2) consists of 88 slightly stepped increments ($\Delta 0.02\text{mm}$), marked 1-23.

To adjust grind setting, move the black ring between COARSE (Setting 23) and FINE (Setting 1) accordingly (beware of marking line).

Recommended settings

Espresso:	3-7
Filter:	9-13
French Press:	15-19
Pepper & Spices:	1-3 (extra-fine)
	9-13 (Table ground)
	17-21 (coarse)
	23 (extra-coarse)

GRINDING

To fill, press down lid (Fig. 4 and 5) and remove it. Add beans (Fig. 6, around 30g), position lid and move slightly until snapped into place.

To grind, please turn crank handle counterclockwise (=CCW, see Fig. 3).

Beware of Catch-up being magnetically attached.

Ergonomic handle to be held with 3 fingers (beware of indentation for thumb, index finger and middle finger).

CLEANING

Turn the black ring (=Adjustment Ring, Fig. 2) to the left (marking to be in line with arrow, Fig. 6). Pull down and out (if tight, please follow instructions on next page).

Clean coneholder and burrs with a brush, then reassemble in reverse order before moving black ring to the right / back to the stepped part or your initial setting.

Please also make sure to read the more detailed instructions on the next page.

ATTENTION

No grinding within the DO NOT GRIND-section (Fig. 6). Turning the Adjustment beyond this section, will separate Grinder Housing from Adjustment Ring.
Do not clean burrs or grinder with water.
Do not grind SALT.

ETZINGER AG

Wirtschaftspark 44
FL-9492 ESCHEN

Phone: +423 375 8383 - www.etzinger-ag.com
Email: support@etzinger-ag.com

etz-U[®] Disassembly & Cleaning



1. Remove magnetically attached Collection Cup by gently pulling it down, turn it around
2. Bottomside of Collection Cup may now be used as tool
3. Fit bottomside of Collection Cup into Adjustment Ring and make sure for it to engage
4. Once engaged, slightly move Collection Cup back and forth to release remains of coffee powder from within
5. Turn Collection Cup with Adjustment Ring to the left (versus COARSE). Make sure for marking to be in line with arrow before pulling Adjustment Ring off
6. Clean coneholder and cone burr with a brush. Brush out ring burr affixed to the grinder body
7. Reposition Adjustment with coneholder and cone burr at indicated arrow (make sure for arrow and marking to be aligned). Groove must engage properly before you can press up Adjustment Ring and move it to the right, back to the stepped part or your initial setting



How to hold handle properly

ETZINGER AG
Wirtschaftspark 44
FL-9492 ESCHEN

Tel.: +423 375 8383
Website: www.etzinger-ag.com
Email: support@etzinger-ag.com

Carefully read the instructions in this guide as well as the information below. It contains important safety information for this grinder. Please keep these instructions for future reference.

- ✓ **Only use the grinder for its intended purpose, the grinding of roasted whole coffee beans.**
- ✓ This grinder can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the grinder in a safe way and understand the hazards involved.
- ✓ Improper and negligent handling of packaging elements with sharp edges can lead to injury and may be hazardous. Store packaging elements out of reach of children, persons with limited physical, mental and/or sensory capacities and pets.
- ✓ Make sure not to have children playing with the handgrinder, its parts or packaging. Children can become entangled or suffocate while playing.
- ✓ Never use inappropriate objects (cutlery, scissors, needles, etc.) to clean the handgrinder or remove any remains.
- ✓ Avoid for the burrs to get in contact with water (rust), do not wash burrs or grinder in the dishwasher, use chemicals or aggressive cleaning products to clean the grinder, check for foreign objects before grinding so to avoid damage to the burrs.
- ✓ Cleaning and user maintenance shall not be made by children without supervision by a qualified person. Maintenance and repair work to be carried out by manufacturer, its service agent or qualified persons only.
- ✓ Safe materials: all materials used for the production and assembly of **etzinger**[®] products and getting in contact with coffee/grains/corns will not result, directly or indirectly, in their becoming a component of or otherwise affecting the characteristics of foods.

Warranty Information for EU Countries / Switzerland and Liechtenstein

The warranty for coffee grinders purchased from Etzinger AG covers a period of **24 months (domestic) / 12 months (commercial)** from the date of purchase under EU Directives . This warranty covers all damage to material and processing and shall not apply to improper operation, improper cleaning, misuse, normal wear and tear, inaccuracy when implementing settings, foreign objects in the beans (stones, screws, plastic parts, etc.) as well as in the event of use that is inconsistent with the intended use, i.e., the grinding of complete, roasted coffee beans.

In the event of shortcomings within the warranty obligation, please contact your dealer or send us an e-mail at support@etzinger-ag.com or call us on +423 3758383.

International Warranty

Warranty, service, and maintenance in all countries outside of Switzerland, Liechtenstein, and the EU or in countries with authorized Dealers are the responsibility of your authorized Dealer from whom you purchased the device. To find your nearest Dealer, please contact us by e-mail at support@etzinger-ag.com.