


The etzMAX is an ON-DEMAND Espresso Grinder for commercial or domestic use, available in 4 versions (LT/LM/P/X).

*Models vary in design and scope of delivery*

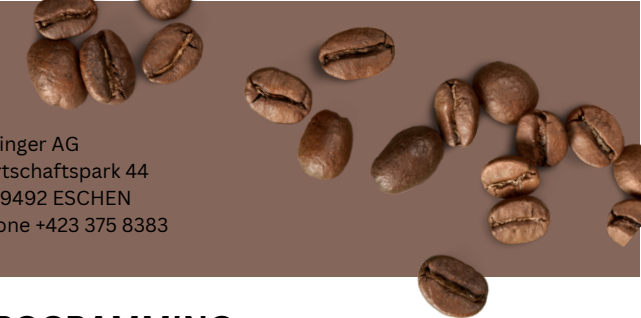

Etzinger AG  
Wirtschaftspark 44  
FL-9492 ESCHEN  
Phone +423 375 8383



## PROGRAMMING

The 3 programmable buttons are used exclusively to set the grinding time in seconds (GbT models) or the weight setting in grams (GbW models).

### Factory setting

**T models: 1=4.3 sec / 2=5.6 sec / 3=7.0 sec**

**W models: 1=14g / 2=18g / 3=22g**

Adjust the doses:

1. Select a button (1, 2, 3)
2. Press + / - to adjust time (sec) or weight (g).
3. Once the desired grinding time or weight has been reached, press and hold the corresponding button for 3 seconds. When the display flashes and an alert sounds (GbW only), the setting is confirmed.
4. To program the other buttons, repeat points 1-3

**W models: If the grinder is in time mode when starting up, press STOP and 1 simultaneously (for 5 seconds) to enter weighing mode.**



Fig.1



Fig.2

## BEAN HOPPER

1. Turn both locking levers backwards (1)
2. Place the bean hopper on the holder (2) with the bean-stop-lever on the right
3. Close both locking levers and turn the bean-stop-lever 180° backwards to the OPEN position
4. The bean feeder is now open.

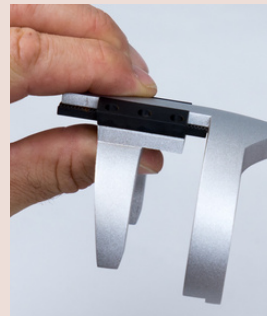


Fig.3



Fig. 4

## PORTAFILTER HOLDER

1. To adjust, press the back of the holder with your index finger while moving the holder arm up/down with your thumb (3)
2. Once adjusted, slide the holder onto the boom until it engages (4)

**ATTENTION (W version only):** Portafilter holder resp. the boom is connected to the weighing cell. Improper use/assembly or excessive force (bending) can damage the weighing cell or have a negative impact on its function.

## GRIND ADJUSTMENT

The adjustment (5) consists of a stepped macro (upper ring, distance 0.1mm) and a stepless micro adjustment (lower ring, distance 0.01mm).



Fig.5

### Recommended settings

(dependent on roast/roast level)

Ristretto: Macro 4-8, Micro 1

Espresso: Macro 6-10, Micro 1

Longh: macro 8-12, micro 1

**NOTE:** Adjustment of more than 1 step on the macro ring or more than 5 steps on the micro ring should only be executed while grinding

- With the grinder running, turn the macro ring to the right for finer settings (FINE direction) or to the left for coarser settings (COARSE direction).
- The pointer marks the selected setting
- The stepless micro ring ranges from coarse (11) to fine (1) and may be used for fine tuning
- Notch 1 on the macro ring serves as the zero point for the micro adjustment.





## SAFETY INSTRUCTIONS

The device is built according to the latest technology. Nevertheless, there are remaining risks. In order to avoid dangers and/or accidents, the safety instructions listed below must be observed and adhered to.

Keep the safety instructions in an easily accessible place so that anyone who operates the device can refer to them at any time.

- Only operate the coffee grinder with alternating current and the correct voltage.
- After unpacking, check whether the mains voltage (volts) and the device voltage match according to the label on the base of the grinder.
- This coffee grinder may only be used for its intended purpose - the grinding of whole, roasted coffee beans.
- Clean the coffee grinder and its housing with a dry or slightly damp cloth.
- Never immerse the coffee grinder, its plug or the cable in water or other liquids.
- Never operate the coffee grinder barefoot or with wet hands.
- The coffee grinder and its power cord must be kept away from children under 8 years and animals.
- Never operate the coffee grinder with a damaged cord or plug.
- Regularly inspect your grinder and check for damages.
- If the power cable is damaged, it must be replaced by the manufacturer, the service agent (Dealer) or a similarly qualified specialist to avoid a hazard.
- Never leave the coffee grinder unattended during grinding/operation (START).
- Children aged 8 and over and people with reduced physical, sensory and/or mental abilities and/or people with a lack of experience and knowledge in handling this coffee grinder may only use it under the supervision of qualified personnel and with sufficient understanding of the possible dangers.
- Cleaning the coffee grinder must not be carried out by children without supervision from qualified persons.
- Maintenance and repairs may only be carried out by the manufacturer, the authorized dealer or an appropriately qualified specialist.
- Always unplug the coffee grinder before assembly, disassembly, repairs and/or cleaning. To do this, pull the power plug out of the socket. Never pull the power cord.

## DISCLAIMER of Liability

**Etzinger Engineering & Etzinger AG are not liable for injuries and damage resulting from non-observance of the safety instructions and/or if the grinder is used other than for its intended purpose, the grinding of whole coffee beans. We assume no guarantee or liability for damages and injuries caused by improper use, modifications and/or changes to the coffee grinder.**